


TTP243 Plus/Pro - Functie dezlipire etichete

1. Demontati panoul frontal




2. Deslipiti 2-3 etichete de pe suportul siliconat

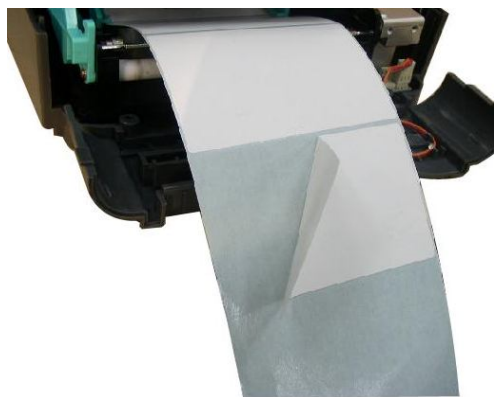

3. Impingeti leverul de blocare pentru a putea introduce suportul siliconat intre tamburul negru si cel alb



4. Introduceti suportul siliconat si prin fanta panoului frontal.Montati panoul frontal la loc.

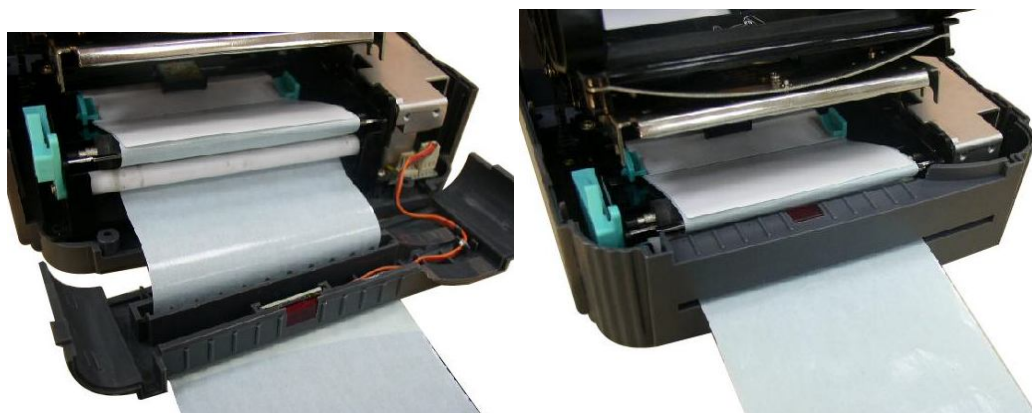

In driverul imprimantei activati functia Peel Off

Page Setup	Graphics	Stock	Options	About
Media Settings				
Method:	Use Current Printer Setting ▼			
Type:	Use Current Printer Setting ▼			
Media Handling				
Post-Print Action:	Peel Off ▼			
Occurrence:	After Every Page ▼			
Interval:	<input type="text"/>	Feed Offset:	0.00 in	
Position Adjustments				

Nota:

Este recomandabil sa setati viteza de tiparire la 2 inch/secunda (5 cm/s) in acest mod de lucru .